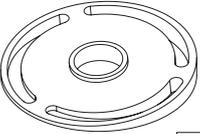
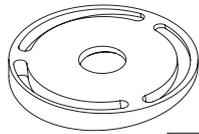








Parts List


SC50 Bottom Half Wedge	SC50 Top Half Wedge	Base Seal	Pair of 6° Washers
			
1	1	19050 1	4

Tools Required

 13mm Spanner (15/32")	 8.5mm (5/16")
 Hole Saw (ø50mm/2")	 Power Drill

Parts Required

 M8 x 100mm+	 Large Plain washer
--	---

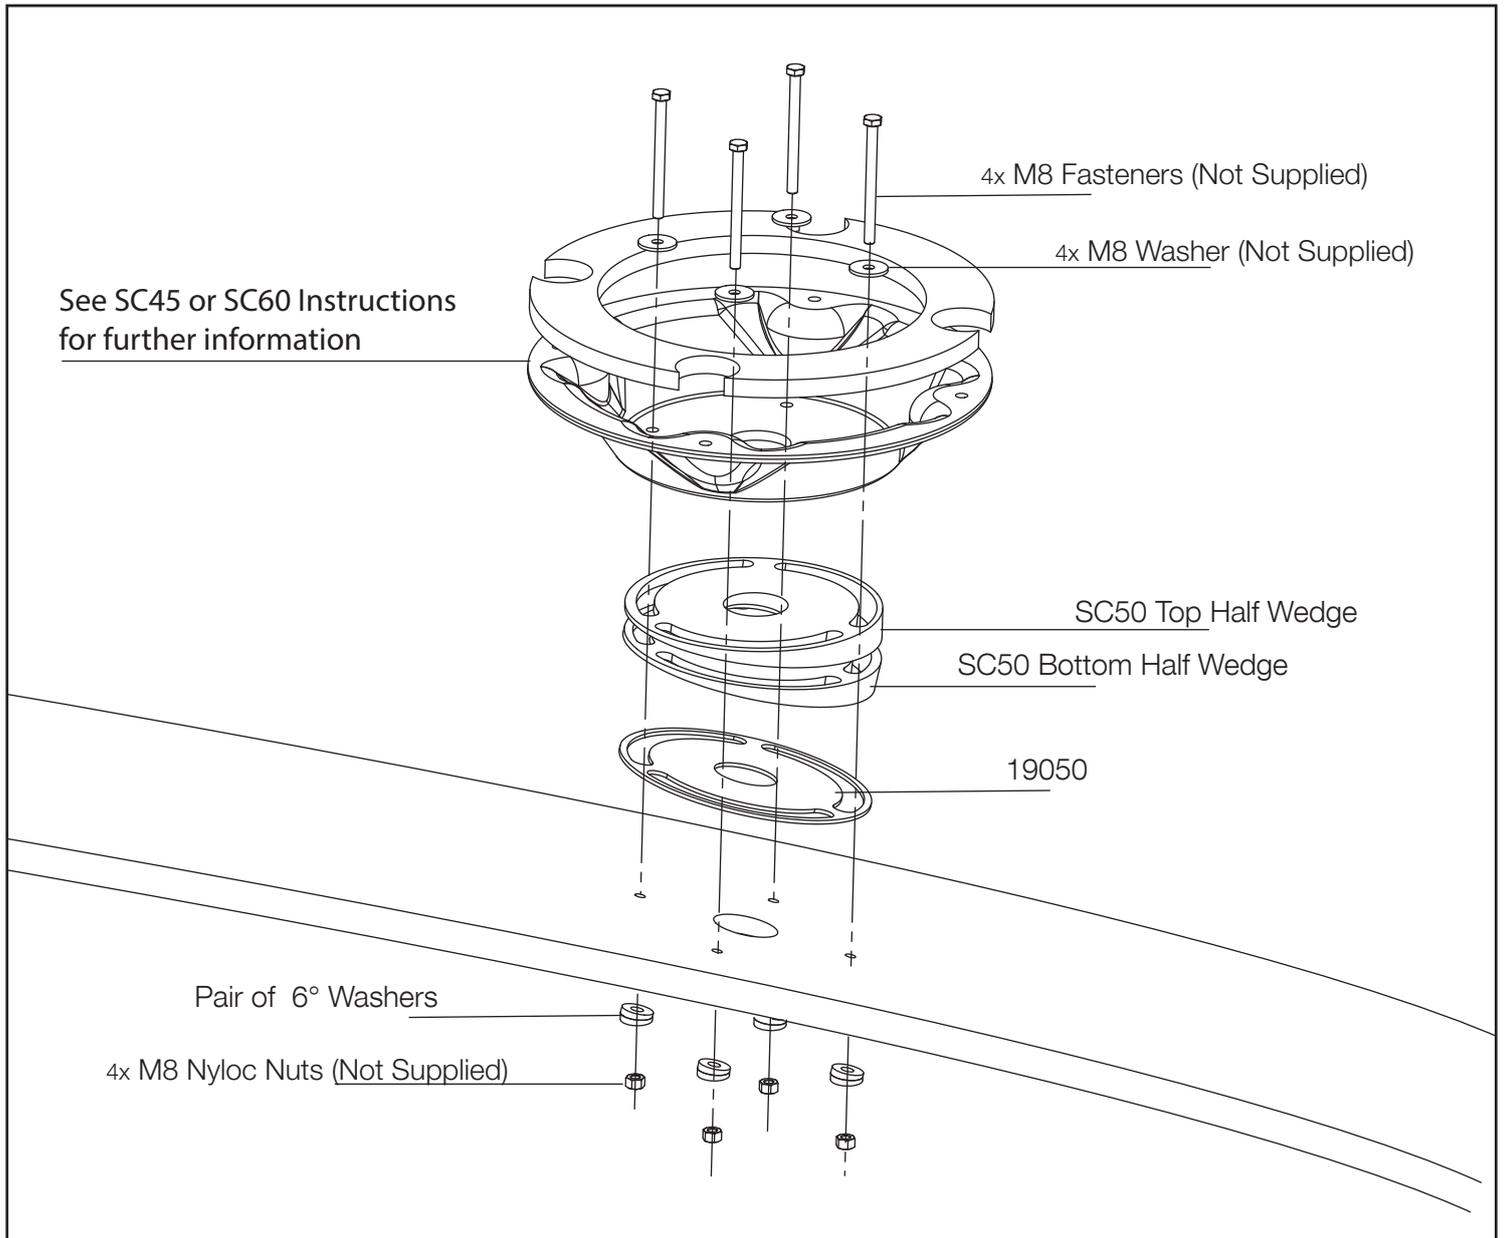

Share your installation with us.



UK & International
+44 (0)1392 531280
sales@scanstrut.com

For further installation
and warranty information
please visit:
www.scanstrut.com

USA
+1 860 308 1416
usasales@scanstrut.com